


2 Post Vehicle Lift


Operating Instructions

Lift to be used by Trained Operator Only


Carefully Position and Adjust Support Pads to Vehicle Manufacturers Lifting Points

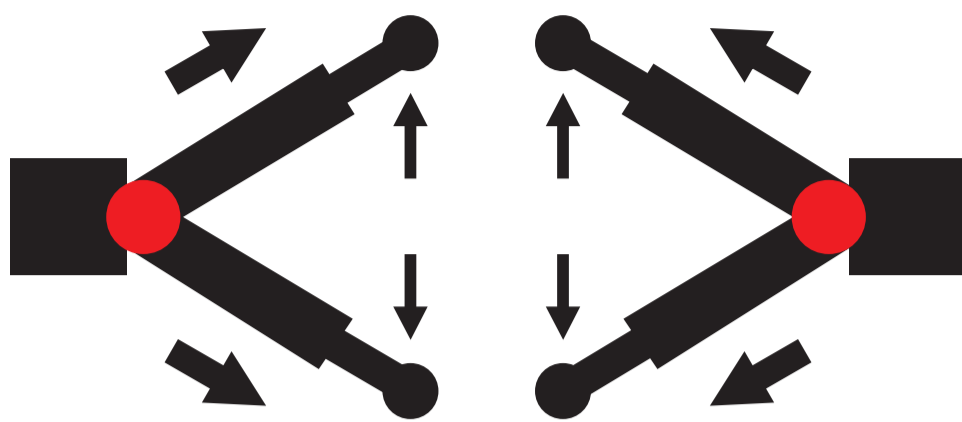


Check Arm Locks are Engaged

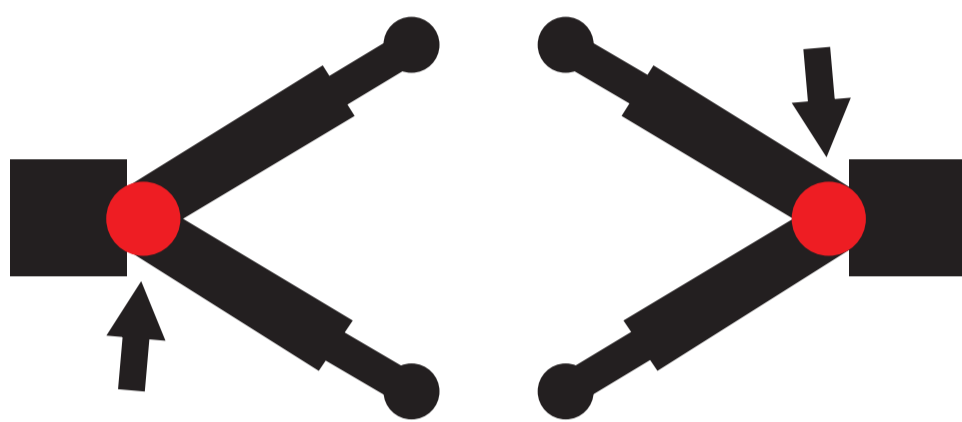

Partially Raise Vehicle To Check Correct Pad Location and Stability of Vehicle

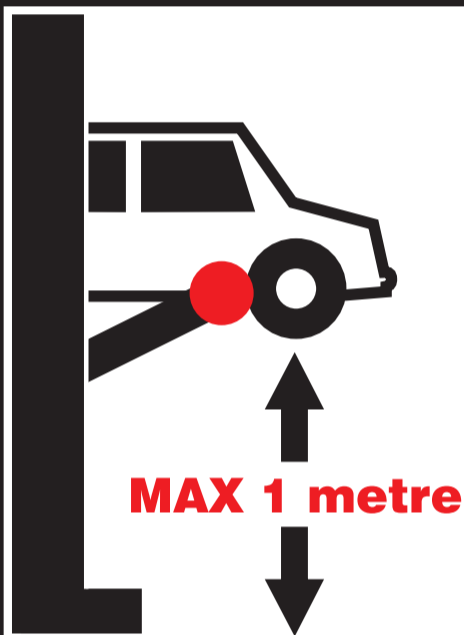

Remain Clear of Lift when Raising or Lowering Vehicle

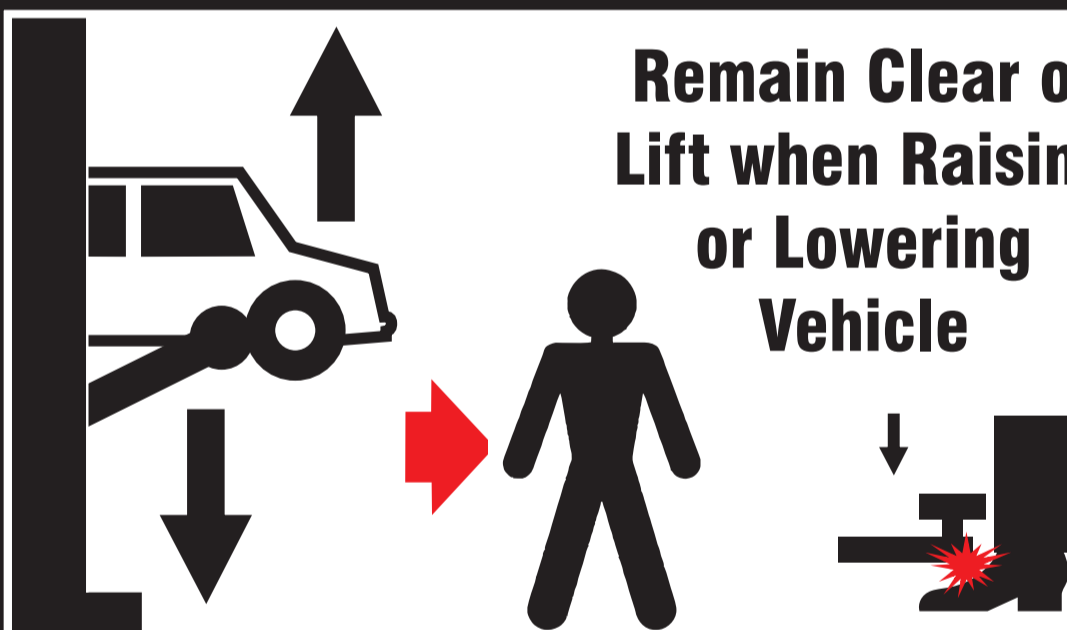

Avoid Excessive Rocking of Vehicle While on Lift



Always Use Safety Stands When Removing or Installing Heavy Components

